



## PAX A80 Quick Reference Guide

\*Power button is located on the CANCEL/"X" key\*

\*Upon initial terminal startup, press the "JetPay HC" icon to launch the payment app.

Action	To Execute
Process a <b>Sale</b>	<ol style="list-style-type: none"> <li>1) From the idle screen, select the card type: CREDIT or DEBIT (CREDIT is the default)</li> <li>2) Select "SALE"</li> <li>2) Enter the sale amount and select "CONFIRM"</li> <li>3) Insert card, swipe card, or hold contactless payment method on the device</li> <li>4.) Merchant receipt copy will automatically print. Press YES to print cardholder receipt. If cardholder copy is not required, press CANCEL.</li> </ol>
<b>Batch Out</b> (Settle) Terminal	<ol style="list-style-type: none"> <li>1) From the idle screen, select FUNC</li> <li>2) Select "BATCH"</li> <li>3) Select "BATCH CLOSE"</li> </ol>
<b>Void</b> a Transaction	<p>(Prevents sale from settling; use in place of refund if terminal has not batched out)</p> <ol style="list-style-type: none"> <li>1) From the idle screen, select "V/SALE"</li> <li>2) Enter transaction number (This number can be found on the transaction receipt), then ENTER</li> <li>3) Transaction will be displayed; press ENTER</li> </ol>
Process a <b>Refund</b>	<p>(Only refund transactions that were not run the same day, otherwise use Void)</p> <ol style="list-style-type: none"> <li>1) From the idle screen, select "RETURN"</li> <li>2) Password: 4321</li> <li>3) Enter Refund amount</li> <li>4) Press CONFIRM</li> <li>5) Insert card, swipe card, or hold contactless payment method on the device</li> <li>6) Merchant receipt copy will automatically print. Press YES to print cardholder receipt. If cardholder copy is not required, press CANCEL.</li> </ol>